


1. Locate the screws by looking at the through bolt hole from the back of the buckle.
2. Use an inspection light to look through the belt openings.
3. Inspect the presence of the 2 screw heads each on the left side and the right side of the buckle.
4. If any screw head is not present or is loose, remove the buckle from service immediately.



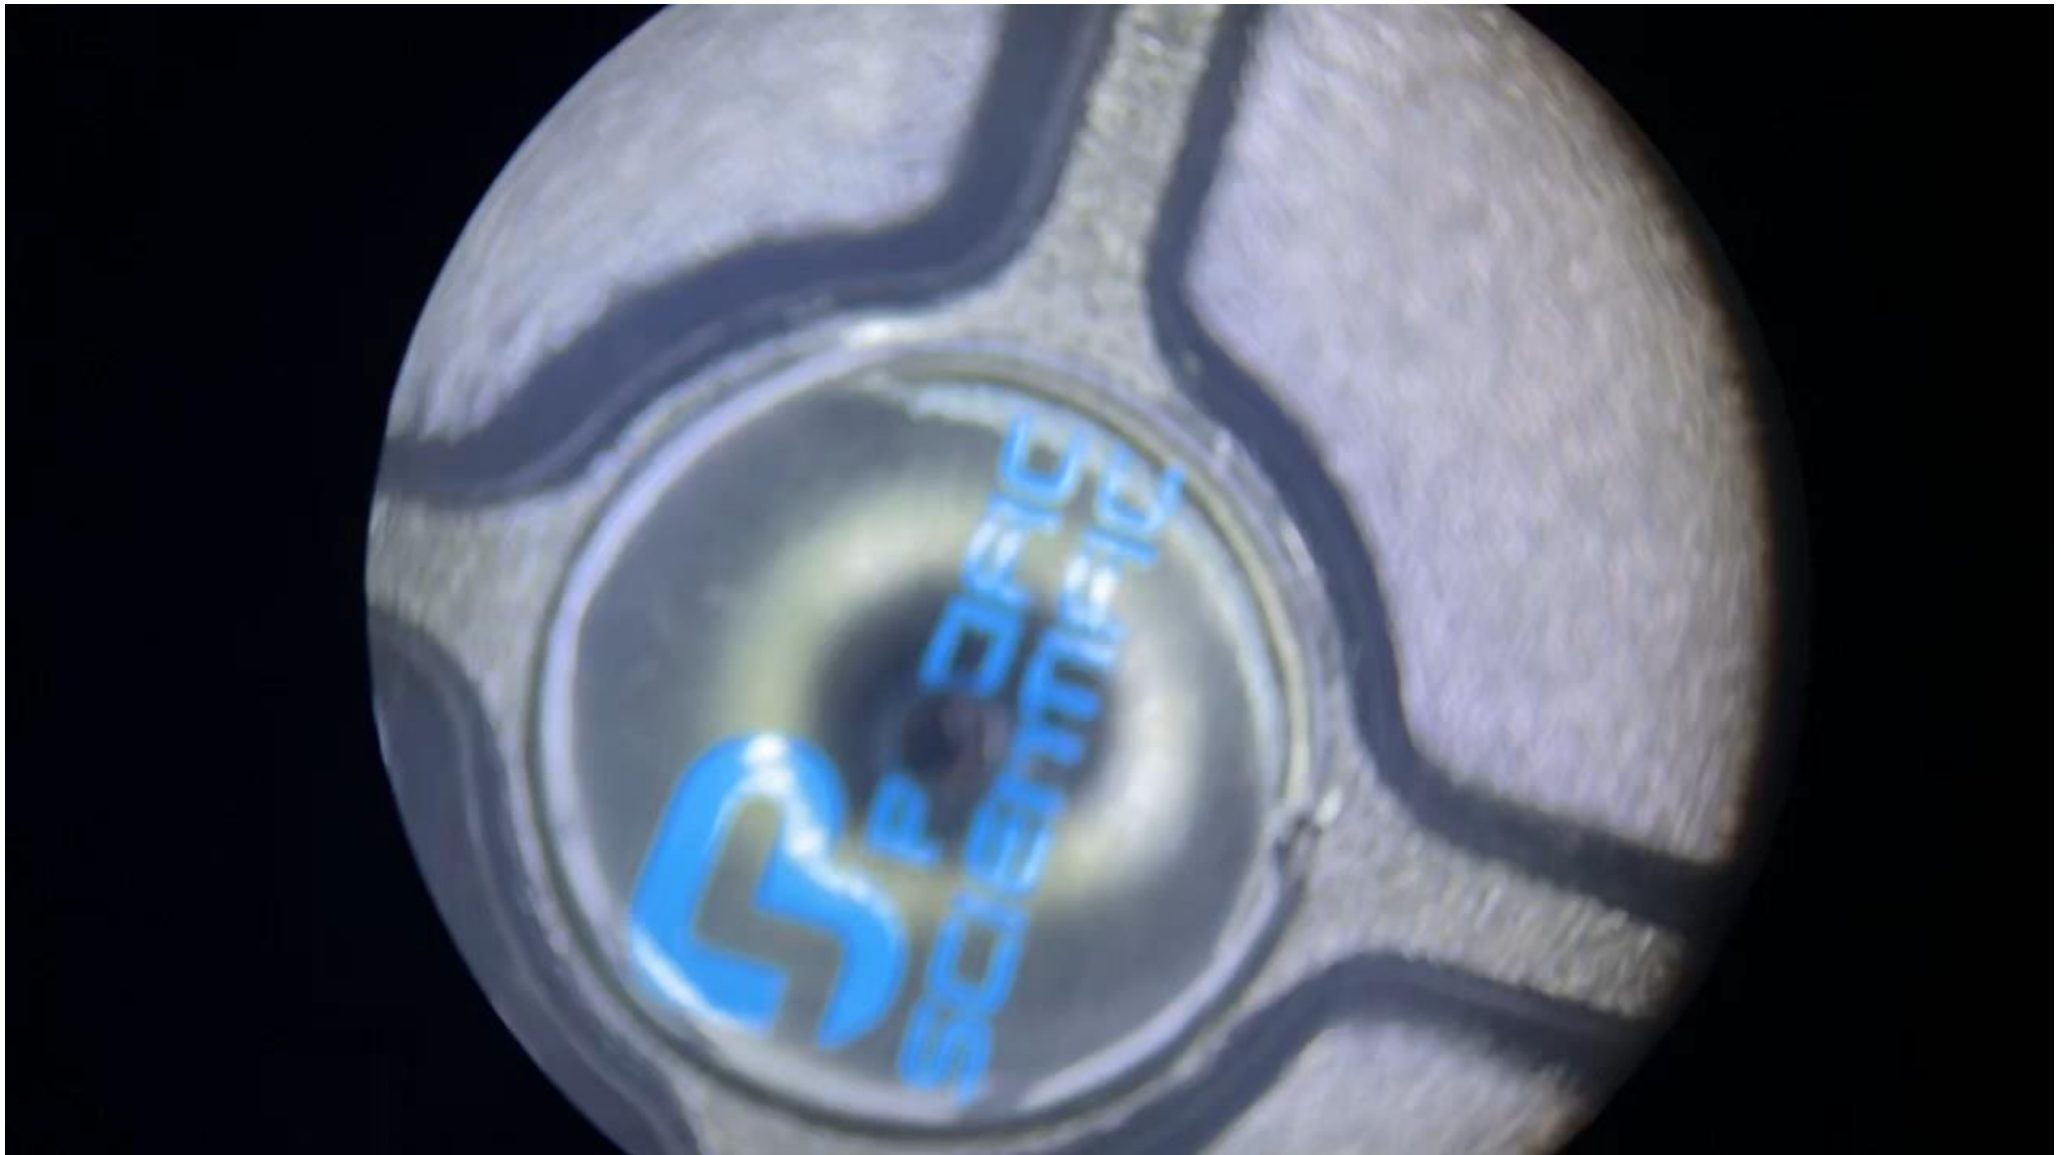

This is a zoom in video to show the screw through the inspection opening.